

Version: 86.001.0119.2012

Datum: 19.01.2012

Unterstützte Hardware:

USB\VID_0BDA&PID_2838&MI_00 = "REALTEK 2832U Device"
USB\VID_0BDA&PID_2839&MI_00 = "REALTEK 2832P + 2836 Device"
USB\VID_13D3&PID_3274&MI_00 = "DVB-T USB Dongle"
USB\VID_1D19&PID_1101&MI_00 = "DK DVBT DONGLE"
USB\VID_1D19&PID_1102&MI_00 = "DK mini DVBT DONGLE"
USB\VID_1D19&PID_1103&MI_00 = "DK 5217 DVBT DONGLE"
USB\VID_1D19&PID_1104&MI_00 = "DIGIVOX Micro HD"
USB\VID_1D19&PID_1105&MI_00 = "DK S-mini DVBT DONGLE"
USB\VID_1D19&PID_1106&MI_00 = "DK 5222 DVBT DONGLE"
USB\VID_1F4D&PID_0837&MI_00 = "RT DTV 2832U"
USB\VID_1554&PID_5013&MI_00 = "REALTEK 2832U Device"
USB\VID_1554&PID_5020&MI_00 = "DVBT DONGLE"
USB\VID_0BDA&PID_2837&MI_00 = "TV Stick"
USB\VID_1F4D&PID_A803&MI_00 = "DVB-T TV Stick"
USB\VID_1F4D&PID_B803&MI_00 = "DVBT/Radio TV Stick"
USB\VID_1F4D&PID_C803&MI_00 = "DVBT/DAB TV Stick"
USB\VID_1F4D&PID_D803&MI_00 = "DVBT/DAB+ TV Stick"
USB\VID_1F4D&PID_C280&MI_00 = "DVBT/C TV Stick"
USB\VID_1F4D&PID_D286&MI_00 = "DVBT/DTMB TV Stick"
USB\VID_1F4D&PID_0139&MI_00 = "ISDB-T(SBTVD) PCTV Tuner"
USB\VID_1F4D&PID_A683&MI_00 = "ATSC PCTV Tuner"
USB\VID_0BDA&PID_2841&MI_00 = "DVB-C PCTV Tuner"
USB\VID_1D19&PID_2101&MI_00 = "DK ATSC DONGLE"
USB\VID_1D19&PID_8202&MI_00 = "DK DVBC/T DONGLE"
USB\VID_1D19&PID_9201&MI_00 = "DK DTMB DONGLE"
USB\VID_1D19&PID_3103&MI_00 = "DK ISDB DONGLE"
USB\VID_0BDA&PID_2821&MI_00 = "ISDB-T(SBTVD)-1seg"
USB\VID_0BDA&PID_2823&MI_00 = "ISDB-T(SBTVD)-Fullseg"
USB\VID_0BDA&PID_2811&MI_00 = "ATSC PCTV Tuner"
USB\VID_0BDA&PID_2825&MI_00 = "ISDB-T(MR1300)-1seg"
USB\VID_0CCD&PID_00A9&MI_00 = "Cinergy T Stick Black"
USB\VID_1D19&PID_1108&MI_00 = "DK DTMB DONGLE"
USB\VID_1554&PID_5026&MI_00 = "DVBT DONGLE"
USB\VID_188A&PID_2940&MI_00 = "REALTEK 2832U Device"
USB\VID_188A&PID_2540&MI_00 = "REALTEK 2832U Device"
USB\VID_188A&PID_1340&MI_00 = "REALTEK 2832U Device"

USB\VID_0BDA&PID_2832 = "REALTEK 2832U Device"
USB\VID_0BDA&PID_2836 = "REALTEK 2832P + 2836 Device"
USB\VID_0BDA&PID_2840 = "DVB-C PCTV Tuner"
USB\VID_1680&PID_A332 = "REALTEK 2832U Device"
USB\VID_1164&PID_6601 = "Digital TV Tuner Card"
USB\VID_13D3&PID_3234 = "DVB-T FTA USB Half Minicard"
USB\VID_13D3&PID_3282 = "AzureWave AW-CA100/100D"
USB\VID_1B80&PID_D397 = "UB450-T"
USB\VID_1B80&PID_D393 = "USB DVB-T Device"
USB\VID_1B80&PID_D396 = "USB DVB-T Device"
USB\VID_1B80&PID_D398 = "USB DVB-T Device"
USB\VID_0BDA&PID_2834 = "TV Stick"
USB\VID_1B80&PID_D394 = "USB DVB-T Device"
USB\VID_1B80&PID_D39C = "MP-ProHDTV Multi"

USB\VID_1B80&PID_D39B = "USB DVB-T Device"
USB\VID_1B80&PID_D395 = "USB DVB-T Device"
USB\VID_1B80&PID_D39A = "USB DVB-T Device"
USB\VID_185B&PID_0620 = "VideoMate U6xx"
USB\VID_185B&PID_0630 = "VideoMate U6xx"
USB\VID_185B&PID_0640 = "VideoMate U6xx"
USB\VID_185B&PID_0650 = "VideoMate U6xx"
USB\VID_185B&PID_0680 = "VideoMate U6xx"
USB\VID_0413&PID_6680 = "QUAD DVB-T"
USB\VID_0413&PID_6F11 = "WinFast PxDTV3000 TS"
USB\VID_0BDA&PID_2820 = "ISDB-T(SBTVD)-1seg"
USB\VID_0BDA&PID_2822 = "ISDB-T(SBTVD)-Fullseg"
USB\VID_0BDA&PID_2810 = "ATSC PCTV Tuner"
USB\VID_1B80&PID_739E = "USB SBTVD Device"
USB\VID_185B&PID_9580 = "VM J500U Series"
USB\VID_185B&PID_9550 = "VM J500U Series"
USB\VID_185B&PID_9540 = "VM J500U Series"
USB\VID_185B&PID_9530 = "VM J500U Series"
USB\VID_185B&PID_9520 = "VM J500U Series"
USB\VID_1B80&PID_D39E = "Digital TV Device"
USB\VID_1B80&PID_E77B = "Digital TV Device"
USB\VID_0BDA&PID_2824 = "ISDB-T(MR1300)-1seg"
USB\VID_1D19&PID_1107 = "DK mini-card"
USB\VID_1D19&PID_9202 = "DK DMBT mini card"
USB\VID_1B80&PID_E41D = "TV Stick"
USB\VID_0CCD&PID_00B3 = "NOXON DAB Stick"
USB\VID_1B80&PID_D3A4 = "USB DVB-T Device"
USB\VID_1B80&PID_D3A1 = "USB Digital TV Device"
USB\VID_2659&PID_1101 = "Sundtek TNT DVB-T"
USB\VID_2659&PID_1102 = "Sundtek TNT DVB-T"